

Quick Facts...

To control a pond for unwanted aquatic vegetation or fish you must first determine the volume of the pond.

Surface area (acres) and average depth (feet) of a pond are needed to calculate pond volume.

Surface area is based on whether the pond is considered regular or irregular in shape. Regular-shaped ponds are either rectangular, circular or triangular. Irregular-shaped ponds can be a combination of semicircles, rectangles or triangles.



© Colorado State University Cooperative Extension. 6/94. Reviewed 9/99. www.colostate.edu/Depts/CoopExt

## WILDLIFE

## Chemical Treatment of Ponds

by K.J. Kehmeier<sup>1</sup>

When chemical treatment of a pond is needed to control aquatic vegetation or poison unwanted fish, the first step is to determine the volume of the pond. Two characteristics of the pond must be known to calculate volume: surface area (acres) and average depth (feet).

no. 6.400

Determine surface area by contacting the agency or construction company that built the pond. If this is not possible, the Soil Conservation Service or county planning and zoning commissioners might be able to determine the area based on aerial photographs.

If you have to determine surface area for yourself, the following examples may be helpful. Many ponds are shaped closely enough to rectangles, circles or triangles to use simple formulas. Determining the area of an irregularly-shaped pond is more difficult.

## **Regular-shaped Ponds**

**Rectangle:** The area of a rectangle is found by multiplying the length (L) by the width (W). (Figure 1). Many borrow pits are this shape.

**Circle:** The area of a circle is calculated by multiplying the radius (onehalf the distance across) times itself, then multiplying that answer by 3.14 (Figure 2.) Not many ponds are round, but often a cove resembles a semicircle. The area of a semicircle is simply the area of a circle divided by two.

**Triangle:** The area of a triangle is one-half the base (b) multiplied by the height (h) (Figure 3). Ponds built by damming a gully are often this shape.

## Irregular-shaped Ponds

Irregularly-shaped areas often can be reduced into combinations of rectangles, semi-circles and triangles. Calculate the area of each and add them together to obtain the total area (Figures 4,5,6).

Areas with irregular shapes require more side to side measurements. The average of the side measurements can be used as the width. Then the area is calculated as a rectangle.

An area such as shown in Figure 6 can be converted to a circle. Measure the distance across the pond intersecting at the pond center. Take at least six to 12 measurements; the more taken, the more accurate the measurement. Remember, area of a circle uses the radius which is half the distance across the circle. So the average distance across the pond divided by two is equal to the radius.


After square feet are determined for the pond, it is easier to make further calculations if square feet are converted to acres. The total area in square feet divided by 43,560 gives the acres covered by the pond.


A convenient measure of pond volume is acre-feet, which is one surface acre that is 1 foot deep. To determine acre-feet, multiply the acreage by the average depth (in feet). Bodies of water having uniform bottom slope have an average depth that can be approximated by dividing maximum depth by two (Figure 7).

Make more accurate determinations (Figure 8) by taking a series of measurements along an s-shaped line across the length of the impoundment. Total the figures and divide by the number of measurements taken to determine average depth.

Take these measurements with a satisfactory sounding device made by attaching a brick or similar weight to a rope marked at one foot intervals.

Determine total volume by multiplying surface area in acres times average depth in feet. The resulting product will be in acre-feet. With the volume known, calculate the correct amount of chemical needed from dosages given on the chemical label.





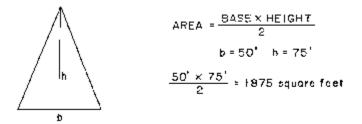


Figure 3: Calculation of the area of a triangle.

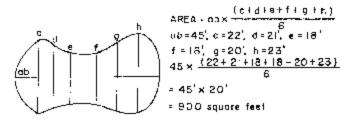


Figure 5: Area calculation for an irregular-shaped pond.





Figure 7: Maximum depth measurements for a pond having a uniform bottom slope.



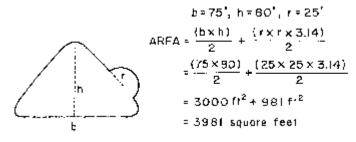


Figure 4: Area calculation for an irregular-shaped pond.

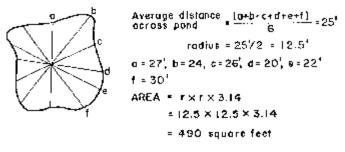


Figure 6: Area calculation for an irregular-shaped pond.




Figure 8: Use of a series of depth measurements to determine average depth.

Issued in furtherance of Cooperative Extension work, Acts of May 8 and June 30, 1914, in cooperation with the U.S. Department of Agriculture, Milan A. Rewerts, Director of Cooperative Extension, Colorado State University, Fort Collins, Colorado. Cooperative Extension programs are available to all without discrimination. No endorsement of products mentioned is intended nor is criticism implied of products not mentioned.

<sup>1</sup> Former Colorado State University research associate, fishery and wildlife biology.